




JAGUAR DEER FENCE INSTALLATION INSTRUCTIONS

*Tools Needed: One 3 to 6 pound Hammer and One Cutter (heavy duty scissors or tin snips)
Note: Deluxe Kit version requires a hoe or shovel.*

CAUTION: Contact utility companies for location of underground lines before digging or driving stakes in ground. Always wear safety glasses when using a hammer.

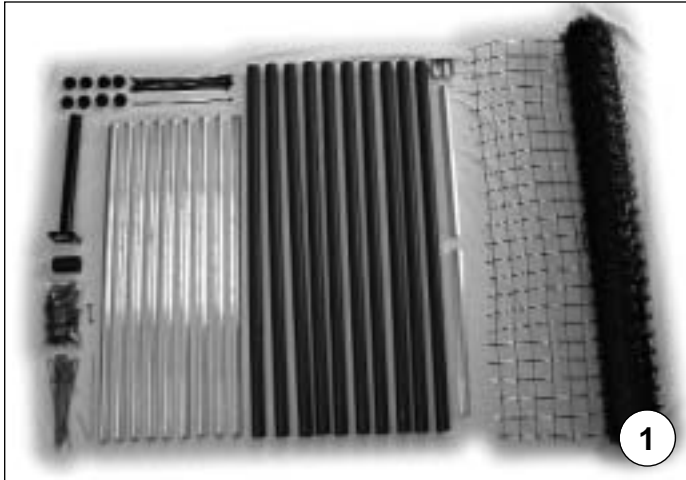

1 Check Contents - Check contents vs. box end label. NOTE: For missing items or questions, do not return to the store. Call Jaguar Fence at 1-800-608-3315.

2 Layout - Measure and mark the corner stake/post locations of your garden. 50' kit (12'x12') corner posts should be no more than 12' apart. 100' kit (24'x24') corner posts should be no more than 24' apart with center posts in the middle of each side (12' max). Next, determine EZ-GATE location. EZ-GATE must be next to a corner post or with a 24'x24' garden you may use a center post. Use EZ-GATE top clamp for spacing approximately 3" (three inches) from the main post and mark the location for the EZ-GATE entry post (short stake). Next measure and mark the position of the EZ-GATE fixed post about 3' (three feet) from the entry post. (See photo 2 and examples of fence layouts and stake/post positioning on attached page.)

3 EZ-GATE Stake Installation - Without the leveling guide on the short stake, use the stake driver and pound the short stake into the ground in the position marked during measuring so only 1/2" to 1" is above ground. (See photo 2.)



4 Driving Stakes - Using the leveling guide and the stake driving tool, Install all the full sized stakes including those marked for the EZ-GATE. Position the stake upright over the marked locations and slide the leveling guide over the stake. Place the driving tool on




top of the stake so that the stake sits in the grooves of the driver. Move the top of the stake until the both bubbles of the leveling guide are centered. Using a hammer (not supplied) begin pounding the driving tool to drive the stake into the ground. Check the leveling guide every few inches to make sure the stake is level. **Stop when the stake is about 4 inches above the top of the leveling guide.** (See photo 3.)

5 Post Installation - Slide the posts over the stakes until they rest on the ground at the desired grade. (See photo 5.) Install all posts including the EZ-GATE post and top clamp. **Note: For Deluxe Kits, slide included post stops over stakes and secure at ground level with included allen wrench before installing the posts.**




6 Retaining Clips Installation - Insert 7 fence retaining clips into one straight vertical row of the pre-drilled post holes. (See photo 6.)

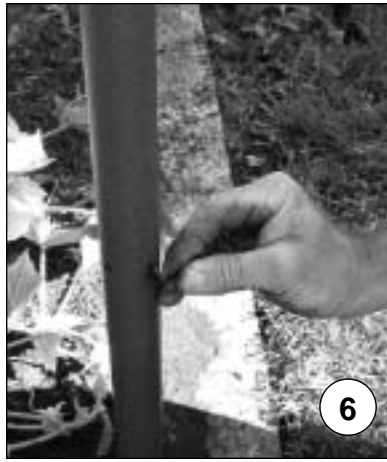

For Deluxe Kits that add the vinyl coated wire fence, insert additional clips in the bottom 3 holes of the adjacent row of pre-drilled holes to secure the wire fabric.

7 Vinyl Coated Wire Fence Fabric Installation - Deluxe Kit Only - Remove approximately 6" of soil all the way along the perimeter of the fence. This will enable you to bury the fence and prevent intrusion by burrowing pests. Starting at the Main post that is 3" from the EZ-GATE post, line the **vinyl coated wire fence fabric** up so 6" (six inches) will be below ground and 2 1/2' (two and a half feet) will be above ground. Wrap once around the post and secure with the retaining clips. (See photo 7a) **Move away from the short EZ-GATE stake, not across it.**

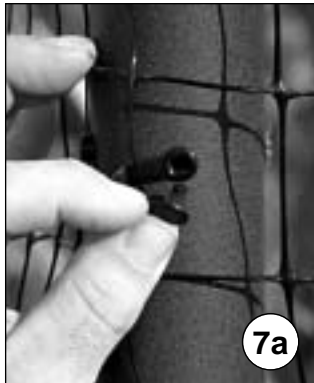

Next move from post to post around the garden, drawing the fence fabric as smooth as possible and secure with retaining clips. After going around the garden, go all the way across the EZ-GATE and wrap the fabric once around the EZ-GATE short stake post. Cut off any excess and secure with the retaining clips. (See photo 7b)


Plastic Fence Fabric Installation - Standard and Deluxe Garden Kits - Starting at the Main post that is 3" from the EZ-GATE post, line the fence fabric up and level with the post top and secure with the retaining clips. (See photo 7a) **Move away from the short EZ-GATE stake, not across it.**



Next move from post to post around the garden, drawing the fence fabric as smooth as possible and secure with retaining clips. After going around the garden, go all the way


across the EZ-GATE short stake post. Cut off any excess and secure with the retaining clips. (See photo 7b)

8 Secure Fence Bottom - Use the metal ground stakes to secure the fence to the ground. Hook the bend in the ground stake over a bottom loop in the fence fabric and push into the ground. (See photo 8a) On **Deluxe Kits** with vinyl coated wire fabric, fill the soil back to the original grade after securing with ground stakes. **Standard Kits** use 3 or 4 wire ground stakes to secure the fence under the EZ-GATE opening. These will be removed and replaced for access.

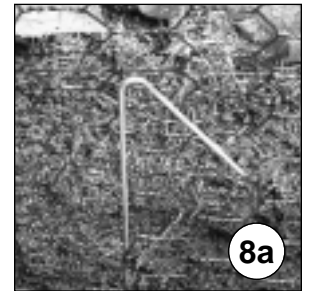


Deluxe Kits that include "Gate Guard" or if Gate Guard has been purchased separately, bury the solid vinyl Black Diamond strip below the gate area so only the round top is above ground. (See photo 8b)

Place the retention stake tips in the lower bottom lip of the Black Diamond strip and hammer through the plastic and into the ground at a 45° angle. Insert the bolts through the pre-drilled holes in the strip so that threads protrude outside the garden. Install snap rings on bolt threads. With the gate closed pull the fence fabric snug and over the bolts. Slide the retention bar over the nuts and secure with wing nuts.

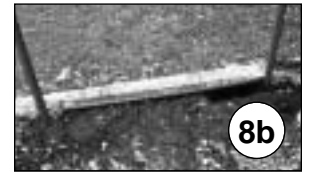

9 Fence Tensioning - Use fence tensioning straps to take out the excess slack. Wrap the strap around a post and a few loops of fence fabric on each side. Insert the strap end into the locking head and pull to desired tightness. (See photo 9.) Cut off excess strap.

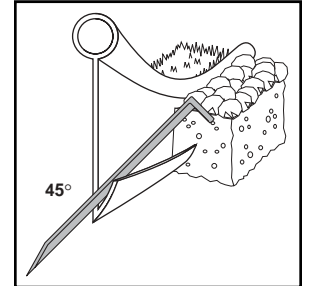

10 Post Cap Installation - Snap caps into the top of each post. (See photo 10)

